



N°	CODE NO.	DESCRIPTION	QTY
1	2000001	Hopper	1
2	2000002	Stand	1
3	2000003	Bearing cover plate	2
4	2000004	Piston spring	1
5	2000005	Central bearing pillow	1
6	2000006	Material auger	2
7	2000007	Whell hub	2
8	2000008	Bearing 5204s	2
9	2000009	Bearing 5204s	2
10	2000010	Bearing shield internal	2
11	2000011	Bearing shield external	2
12	2000012	Discrim control bar	1
13	2000013	B&E R10 x 30	1
14	2000014	Nut R10	1
15	2000015	Control rod short	2
16	2000016	Control rod long	1
17	2000017	Control rod intermediate	1
18	2000018	Wheel complete	2
19	2000019	Material flow plate	1
20	2000020	Handle	1
21	2000021	Steel spring	1
22	2000022	Material grip	1
23	2000023	Knob	2
24	2000024	Knob material control	1
25	2000025	Ball bearing	1
26	2000026	Flow control level	1
27	2000027	Spring 6 x 20	1
28	2000028	Turned bar	1